



# UM10563

## Gaming suitcase demo system

Rev. 1 — 9 August 2012

User manual

### Document information

Info	Content
<b>Keywords</b>	I2C-bus, I2C, PCU9669, bus controllers, LED driver, stepper motor, Fast-mode Plus, Fm+, Ultra Fast-mode, UFM
<b>Abstract</b>	The 'Gaming suitcase' is a demonstration system for I <sup>2</sup> C-bus controllers, LED drivers, and stepper motor controllers. This demo system enables quick and easy evaluation of the PCU9669, PCU9655, PCU9955 and PCA9629.



**Revision history**

Rev	Date	Description
v.1	20120809	user manual; initial release

**Contact information**

For more information, please visit: <http://www.nxp.com>

For sales office addresses, please send an email to: [salesaddresses@nxp.com](mailto:salesaddresses@nxp.com)

## 1. Introduction

The 'Gaming suitcase demo system' is a demonstration kit for I<sup>2</sup>C-bus controllers, LED drivers and stepper motors. This demonstration kit and software provide an overview of the capabilities of its components and is easy to use.

The PCU9669 is a new generation I<sup>2</sup>C-bus controller that supports new 'Ultra Fast-mode (UFm)' which is defined in latest I<sup>2</sup>C-bus specification ([Ref. 1](#)). The PCU9669 bridges MCU's parallel bus and 3 channel I<sup>2</sup>C buses (UFm × 2 channels + Fm+ × 1 channel). The PCU9669 (and its family) has a large buffer to manage transfers with ultra low CPU load.


The PCU9955 is a constant current LED driver.

The PCU9655 is a voltage switch LED driver.

Sample code is available for the demo kit. The processor is an NXP LPC2214 ARM microcontroller. The LPC12214 supports to build a feature-rich demo with its high capability.


This evaluation board kit is populated with the following:

- PCU9669 motherboard with ARM7 LPC2214 microcontroller
- One 160-white-LED board (PCA9955)
- Six 4-RGB-LED boards (PCU9655)
- One 8-white-LED board (PCU9655)
- Two 5-stepper motor boards (PCA9629)
- Universal power supply

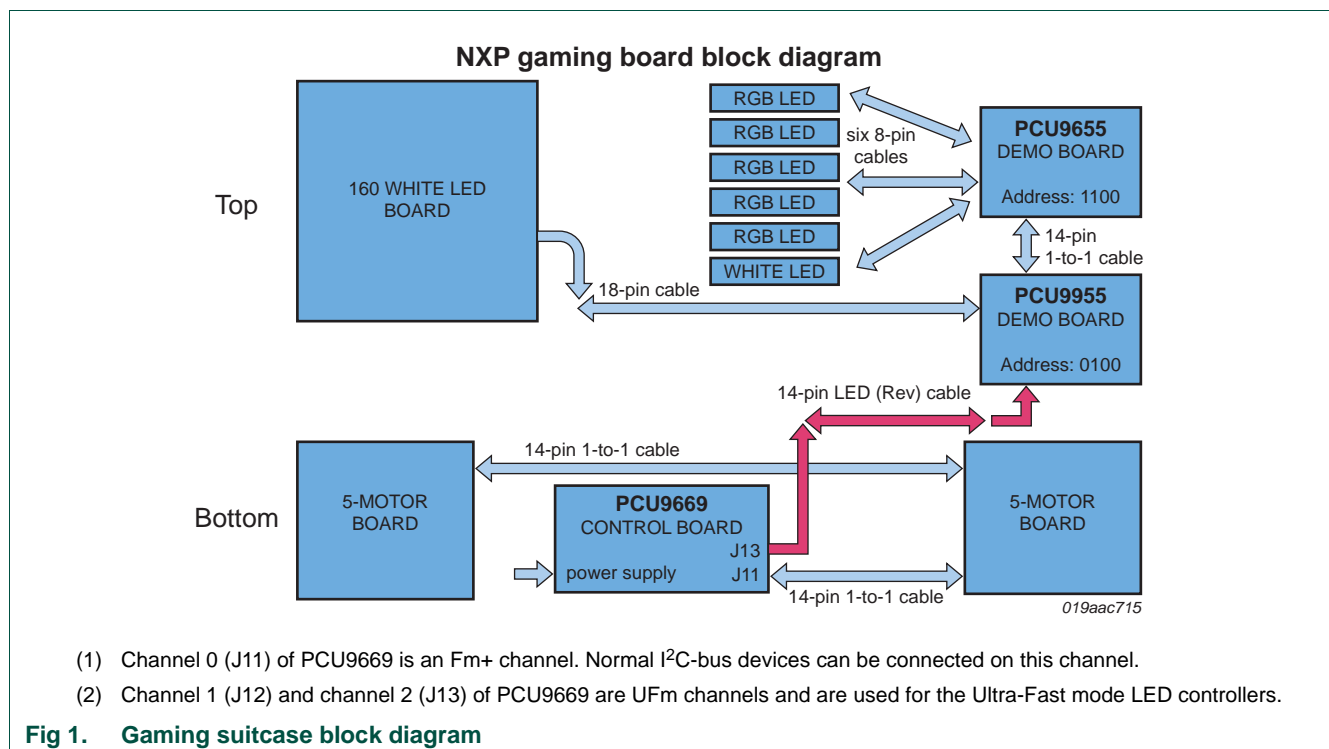

## 2. Features

- A complete demonstration platform for the PCU9669 I<sup>2</sup>C-bus controller, the PCU9655 and PCU9955 LED drivers, and the PCA9629 stepper motor controller used in gaming and vending machines
- Easy to use pre-programmed demonstrations
- I<sup>2</sup>C connectors are compatible for I<sup>2</sup>C-bus slave device demo boards
- Easy software development using Keil or GNU C compilers
- Complete sample code for demo operation
- Field programmable
- Convenient test points for easy scope and logic analyzer measurements

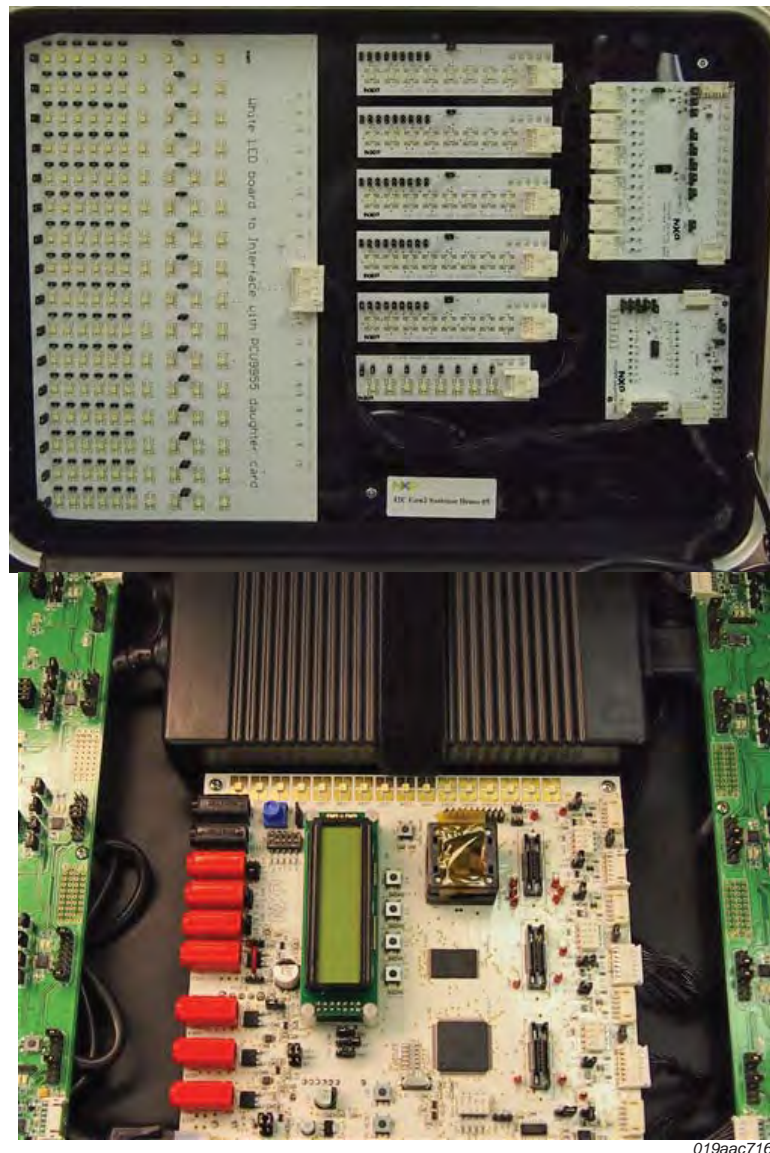

019aac716

**Fig 2. Gaming suitcase top and bottom panels**

## 3. Getting started

---

### 3.1 Assumptions

Familiarity with the I<sup>2</sup>C-bus is helpful but not required.

### 3.2 Target versions

This user manual is written based on the versions of:

- Sample code — version 1.0

### 3.3 Static handling requirements

#### CAUTION



This device is sensitive to ElectroStatic Discharge (ESD). Therefore care should be taken during transport and handling. You must use a ground strap or touch the PC case or other grounded source before unpacking or handling the hardware.

### 3.4 Ordering

Demo systems are available for loan to qualified users upon request at [i2c.support@nxp.com](mailto:i2c.support@nxp.com).

### 3.5 Minimum requirements

#### 3.5.1 Stand-alone demo

- A 100 V to 240 V AC power source

#### 3.5.2 Development

- A 100 V to 240 V AC power source
- USB cable with mini-USB connector
- A PC with a C compiler such as Keil
- PCU9669 motherboard
- PCU9955, PCU9655 and PCA9629 demo boards

### 3.6 Setup

This section describes how to set up the Gaming suitcase demo.

#### 3.6.1 PCU9669 demo setup

##### 3.6.1.1 Jumper settings

Default jumper and switch positions for the PCU9669 demo.

**Table 1. Jumper settings**

Jumper	Position	Description
<b>Motherboard</b>		
JP1	open (default)	reserved for microcontroller programming (CBUS1)
	1-2	reserved
JP2	1-2	reserved for microcontroller programming (CPU Rst)
	open (default)	reserved
JP3	open (default)	JTAG TRCK LPC2214 not returned
	1-2	JTAG TRCK LPC2214 returned
JP5	open (default)	JTAG LPC2214 IDC +3.3 V power not connected
	1-2	JTAG 2214 IDC +3.3 V power connected
JP11	open (default)	JTAG TCK PCA966x not returned
	1-2	JTAG TCK 996x returned (pin 9 to 11)
JP12	open (default)	JTAG 996x IDC +3.3 V not connected
	1-2	JTAG 996x IDC +3.3 V power connected
JP13	open	CH0 24 V power not connected
	1-2 (default)	CH0 24V power connected
JP14	open (default)	CH0 test mode SCL0 pull-down disabled
	1-2	CH0 test mode SCL0 pull-down enabled
JP15	open (default)	CH0 test mode SDA0 pull-down disabled
	1-2	CH0 test mode SDA0 pull-down enabled
JP16	1-2 (default)	CH1 24 V power enabled
	open	CH1 24 V power disabled
JP17	open (default)	CH1 test mode SCL1 pull-down disabled
	1-2	CH1 test mode SCL1 pull-down enabled
JP18	open (default)	CH1 test mode SDA1 pull-down disabled
	1-2	CH1 test mode SDA1 pull-down enabled
JP19	1-2 (default)	CH2 24 V power enabled
	open	CH2 24 V power disabled
JP20	open (default)	CH2 test mode SCL2 pull-down disabled
	1-2	CH2 test mode SCL2 pull-down enabled
JP21	open (default)	CH2 test mode SDA2 pull-down disabled
	1-2	CH2 test mode SDA2 pull-down enabled
JP4	1-2	TXD - 2214 enabled
	open (default)	TXD - 2214 disabled

**Table 1.** Jumper settings ...continued

Jumper	Position	Description
JP7	1-2 (default)	LCD_D0 enabled
	2-3	LCD_D0 disabled
JP8	1-2	LCD CMOS TX/RX disabled
	2-3 (default)	LCD CMOS TX/RX enabled
JP9	open (default)	AIN0 pin 3/AIN1 pin 2/GND pin 1 headers — no jumpers
JP10	open (default)	LCD_D1 reserved
	open (default)	LCD_D1 reserved
JP22	1-2 (default)	PCU9955 pwr pin 1 = 5 V selected
	2-3	PCU9955 pwr pin 3 = 3.3 V selected
SV3	1-2 (default)	3.3 V Switched PS enabled
	2-3	3.3 V Switched SV3 supply (banana plug)
SV4	1-2 (default)	3.3 V Master PS enabled
	2-3	3.3 V Master SV4 supply (banana plug)
SV5	1-2 (default)	3.3 V PLL PS enabled
	2-3	3.3 V PLL PS SV5 supply (banana plug)
SV6	1-2 (default)	5 V Switched enabled
	2-3	5 V Switched SV6 supply (banana plug)

**Table 2.** Switch positions

Switch	Position	Description
SW9	ON	S1: SCL0 pull-up
	ON	S2: SDA0 pull-up
	OFF	S3: SDA0 series resistor
	OFF	S4: SCL0 series resistor
SW10	OFF	S1: SCL1 pull-up
	OFF	S2: SDA1 pull-up
	ON	S3: SDA1 series resistor
	ON	S4: SCL1 series resistor
SW11	OFF	S1: SCL2 pull-up
	OFF	S2: SDA2 pull-up
	ON	S3: SDA2 series resistor
	ON	S4: SCL2 series resistor
SW12	ON	S1: A0 PCU9955
	ON	S2: A1 PCU9955
	ON	S3: A2 PCU9955
	ON	S4: A3 PCU9955
	OFF	S5: RESET PCU9955

**Table 3. 160 white LED board**

Jumper	Position	Description
J8, J16, J24, J32, J40, J48, J56, J64, J72, J80, J88, J96, J104, J112, J128, J128	1-2 (default) open	24 V power rail on pin 1 $V_{LED}$ power disabled.
J7, J15, J23, J31, J39, J47, J55, J63, J71, J79, J87, J95, J103, J111, J119, J127	1-2 (default) open	Shorts four LEDs out of the string due to $V_{LED}$ limit of 24 V. String of four LEDs enabled.
J1 to J6, J9 to J14, J17 to J22, J25 to J30, J33 to J38, J41 to J46, J49 to J54, J57 to J62, J65 to J70, J73 to J78, J81 to J86, J89 to J94, J97 to J102, J105 to J110, J113 to J118, J121 to J126	open (default) 1-2	Corresponding LED enabled. Corresponding LED disabled.

**Table 4. PCU9955 demo board**

Jumper	Position	Description
J1	1-2 (default) 2-3	$V_{LED}$ 24 V $V_{LED}$ 5 V
J3	1-2 2-3 (default)	PCU9955 PWR 3.3 V PCU9955 PWR 5 V
J4	1-2 (default) 2-3	A3 LOW ( $V_{SS}$ ) A3 HIGH ( $V_{DD}$ )
J5	1-2 (default) 2-3	A2 LOW ( $V_{SS}$ ) A2 HIGH ( $V_{DD}$ )
J6	1-2 2-3 (default)	A1 LOW ( $V_{SS}$ ) A1 HIGH ( $V_{DD}$ )
J7	1-2 (default) 2-3	A0 LOW ( $V_{SS}$ ) A0 HIGH ( $V_{DD}$ )
J8	open (default) 1-2	SCL pull-up disabled SCL pull-up enabled
J9	open (default) 1-2	SDA pull-up disabled SDA pull-up enabled
J10	1-2 (default) open	Reset HIGH - inactive Reset LOW - active



**Table 5. PCU9655 demo board**

Jumper	Position	Description
J1	1-2	A0 LOW ( $V_{SS}$ )
	2-3 (default)	A0 HIGH ( $V_{DD}$ )
J3	1-2	PCU9655 PWR 3.3 V
	2-3 (default)	PCU9655 PWR 5 V
J4	1-2 (default)	A4 LOW ( $V_{SS}$ )
	2-3	A4 HIGH ( $V_{DD}$ )
J5	1-2 (default)	A3 LOW ( $V_{SS}$ )
	2-3	A3 HIGH ( $V_{DD}$ )
J6	1-2 (default)	A2 LOW ( $V_{SS}$ )
	2-3	A2 HIGH ( $V_{DD}$ )
J7	1-2	A1 LOW ( $V_{SS}$ )
	2-3 (default)	A1 HIGH ( $V_{DD}$ )
J8	open	SCL pull-up disabled
	1-2	SCL pull-up enabled
J9	open	SDA pull-up disabled
	1-2 (default)	SDA pull-up enabled
J10	1-2 (default)	Reset HIGH - inactive
	2-3	Reset LOW - active
JP9	1-2	$V_{LED}$ 5 V
	2-3 (default)	$V_{LED}$ 24 V

**Table 6. Left stepper motor board**


Jumper	Position	Description
J7	1-2 and 9-10	Address 40h
J11	1-2 and 15-16	Address 42h
J17	7-8 and 9-10	Address 44h
J23	7-8 and 15-16	Address 46h
J32	1-2 and 13-14	Address 48h

**Table 7. Right stepper motor board**

Jumper	Position	Description
J7	1-2 and 11-12	Address 4Ah
J11	7-8 and 13-14	Address 4Ch
J17	7-8 and 11-12	Address 4Eh
J23	5-6 and 9-10	Address 50h
J32	3-4 and 9-10	Address 52h

### 3.6.1.2 Connections


The following figures are a collection of images that illustrate the connections between the various boards in the demo system.

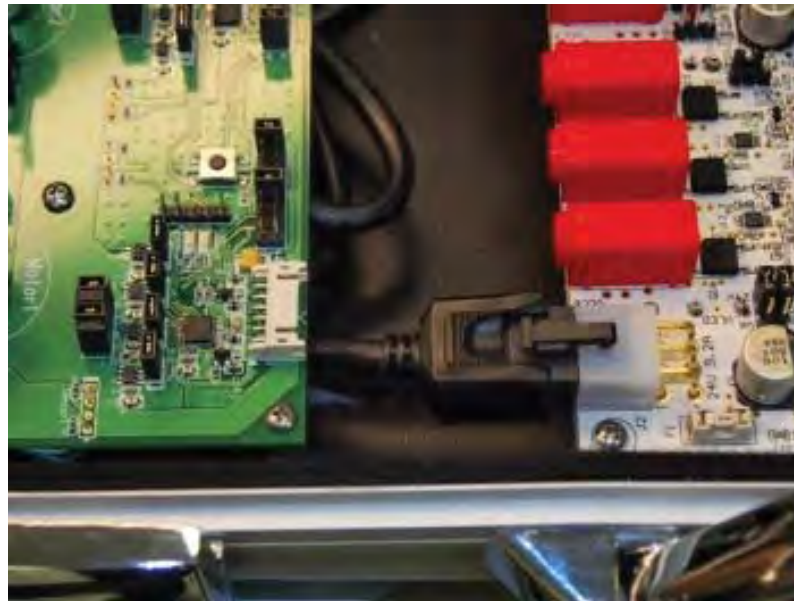

**Fig 3. DC 24 V connector**




**Fig 4. Board-to-board connection — stepper motor controllers**

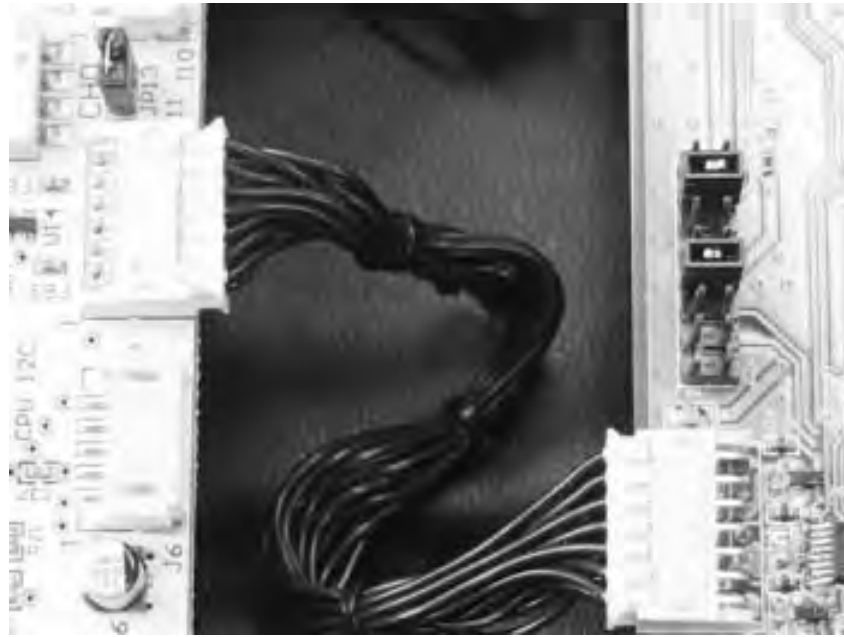

019aac719

**Fig 5. Motherboard to stepper motor board connection**

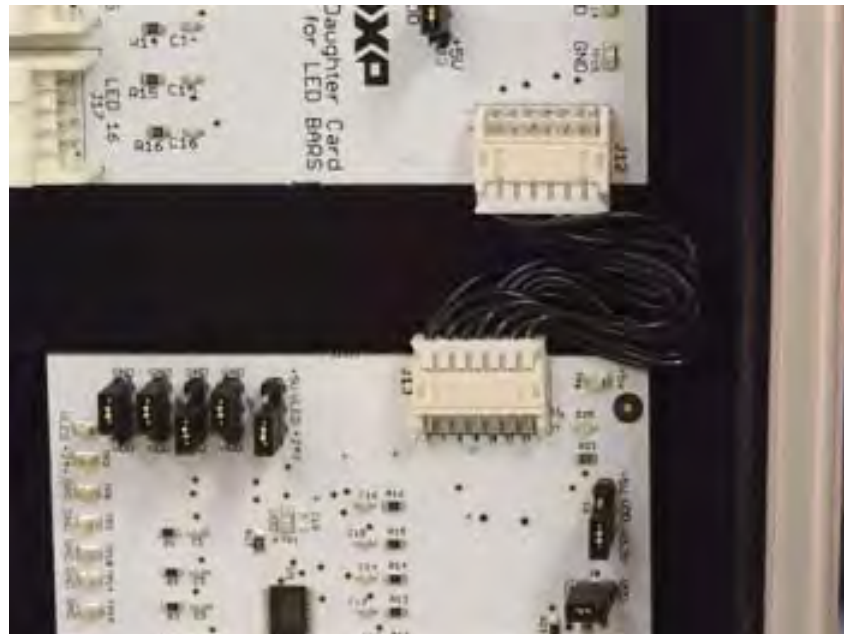

019aac720

**Fig 6. Board-to-board connection — LED controllers**




019aac721

Fig 7. LED160 18-pin connector on PCU9955 board




019aac722

Fig 8. LED160 board 18-pin connector

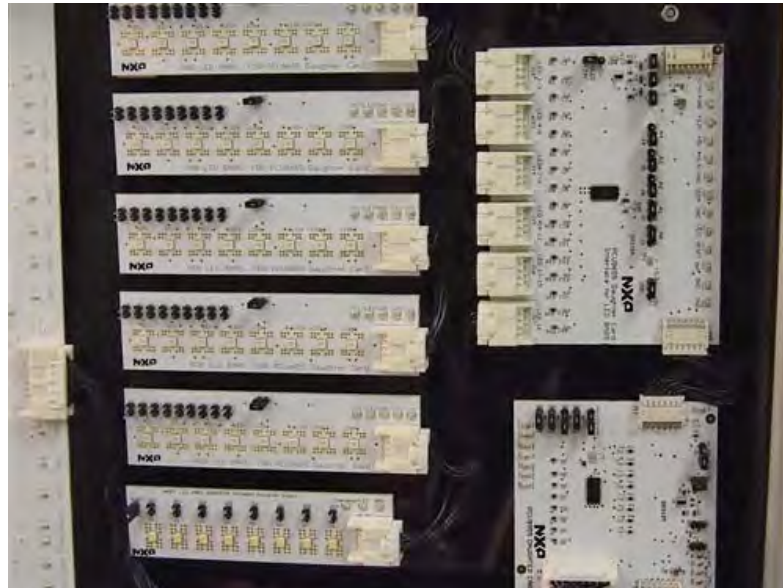

019aac723

Fig 9. RGB board connections

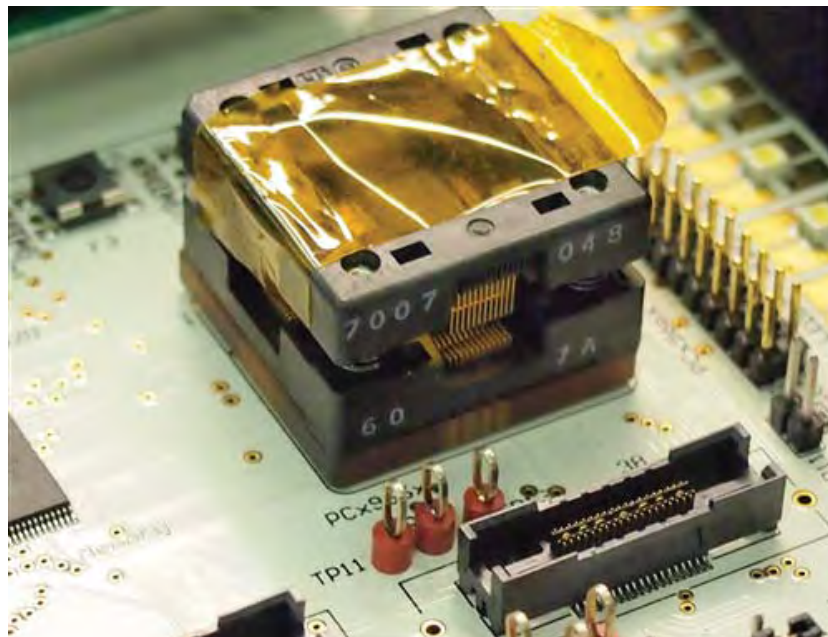


019aac724

Fig 10. PCU9669 socket



### 3.6.1.3 Power-on


Once the AC-DC adapter is connected to a mains outlet, a total of eight LEDs illuminate to indicate the presence of power on the different power rails.

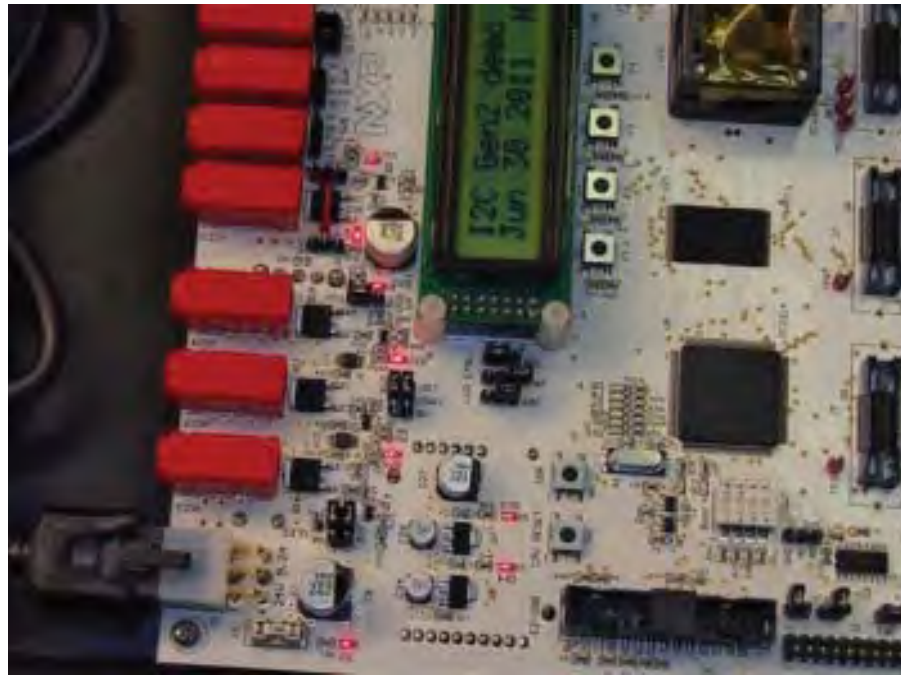

019aac725

**Fig 11. LED power indicators**

The LCD panel will display a message to indicate the demo is ready to run.

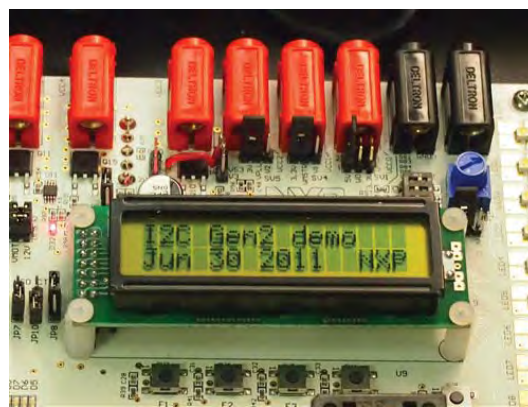

019aac726

**Fig 12. LCD panel showing a ready status**

To run the auto-demo:


1. Press 'CPU\_RESET' button.
2. Press 'F1' button to run through automated routine. In this mode, all available LED patterns and stepper motor patterns will run in a loop mode.
3. To end the demo, simply press the 'CPU\_RESET' button.

To run in manual mode:

1. Press 'CPU\_RESET' button.
2. Press 'F2' button to run through the first demonstration routine.
3. To cycle through the different demos, press the 'F2' button to move backwards through the routines, or 'F4' to move forward. The 'F3' button lets the demo pattern again.
4. To exit, press the 'CPU\_RESET' button.

To check software revision:

1. Press 'CPU\_RESET' button.
2. Press and hold 'F3' or 'F4' button to display software revision.
3. Press and hold 'F3' or 'F4' button again to display software build date and time.
4. To exit, press the 'CPU\_RESET' button. (This is not necessary. Pressing F1 or F2 starts Auto or Manual demo mode.)

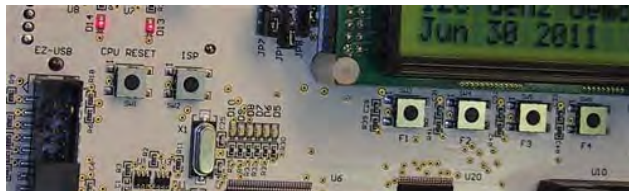

019aac727

**Fig 13. CPU\_RESET and F1 to F4 buttons**

## 4. Troubleshooting

For issues not covered under this troubleshooting guide, please contact [i2c.support@nxp.com](mailto:i2c.support@nxp.com).

**Table 8. Troubleshooting guide**

Problem	Solution
LCD displays 'timeout', nothing works.	PCU9669 socket might be loose. Assure good contact on PCU9669, then press 'CPU_RESET' again. This usually corrects the time-out issue and you can press F1 or F2 to start your routine.
Stepper motor boards will not start.	Press 'CPU_RESET' several times, then 'F1'.
One or more motor board spinners are not 'in sync' with other spinners.	Press 'CPU_RESET' and restart with 'F1'.
Spinner not turning, strange sound coming from motor board.	Spinner has been moved and is making contact with optical switch. Move spinner by hand (soft metal), fix bend or placement error until you can rotate by hand through both sensors without touching. Press 'CPU_RESET' and 'F1'.
One or more spinners seem to have incorrect timing, possibly one left motor moving when right board is enabled (as an example).	Address pins are incorrect. Verify address pin locations, and restart demo.
Acting strange, not everything working.	Verify all eight red LEDs on the control board are lit up. If not, possible power supply loss. Can be caused by shorting connections on smaller boards or during 'hot' cable changes.
Parts damage seen on motor boards.	14-pin LED cable (which is wired reverse from standard cable) has been plugged into motor boards. PCA9629's will be blown and need to be replaced as well as any capacitors, inductors or ESD protection diodes before boards will work correctly. Puts +24 V on +5 V line.



## 5. Schematics

The following schematics are available from [i2c.support@nxp.com](mailto:i2c.support@nxp.com):

- PCU9669 motherboard with ARM7 LPC2214 microcontroller motherboard:  
PCU966x\_V3\_20.cct.pdf
- Stepper motor boards (PCA9629):  
pca9629 5-motor design.pdf
- PCU9655 voltage switch LED controller board:  
PCU9655\_Daughter\_card schematic.pdf
- PCU9955 constant current LED controller board:  
PCU9955\_daughter card schematic.pdf
- PCU9655 White LED daughter board:  
PCU9655 WHITE LED Bar1 schematic.pdf
- PCU9655 RGB LED daughter board:  
PCU9955 RGB LED BAR 1 schematic.pdf
- 160 White LED board:  
PCU9955 White 160 LED board schematic.pdf

## 6. Abbreviations

**Table 9. Abbreviations**

Acronym	Description
CPU	Central Processing Unit
ESD	ElectroStatic Discharge
Fm+	Fast-mode Plus
I <sup>2</sup> C-bus	Inter Integrated Circuit-bus
LCD	Liquid Crystal Display
LED	Light Emitting Diode
MCU	MicroController Unit
PC	Personal Computer
PLL	Phase-Locked Loop
RGB	Red/Green/Blue
SRAM	Static Random Access Memory
UFm	Ultra-Fast mode
USB	Universal Serial Bus

## 7. References

- [1] **UM10204, “I<sup>2</sup>C-bus specification and user manual”** —  
Rev. 4, 13 February 2012; NXP Semiconductors;  
[www.nxp.com/documents/user\\_manual/UM10204.pdf](http://www.nxp.com/documents/user_manual/UM10204.pdf)

## 8. Legal information

### 8.1 Definitions

**Draft** — The document is a draft version only. The content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

### 8.2 Disclaimers

**Limited warranty and liability** — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the *Terms and conditions of commercial sale* of NXP Semiconductors.

**Right to make changes** — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

**Suitability for use** — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

**Applications** — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's

third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

**Export control** — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

**Non-automotive qualified products** — Unless this data sheet expressly states that this specific NXP Semiconductors product is automotive qualified, the product is not suitable for automotive use. It is neither qualified nor tested in accordance with automotive testing or application requirements. NXP Semiconductors accepts no liability for inclusion and/or use of non-automotive qualified products in automotive equipment or applications.

In the event that customer uses the product for design-in and use in automotive applications to automotive specifications and standards, customer (a) shall use the product without NXP Semiconductors' warranty of the product for such automotive applications, use and specifications, and (b) whenever customer uses the product for automotive applications beyond NXP Semiconductors' specifications such use shall be solely at customer's own risk, and (c) customer fully indemnifies NXP Semiconductors for any liability, damages or failed product claims resulting from customer design and use of the product for automotive applications beyond NXP Semiconductors' standard warranty and NXP Semiconductors' product specifications.

**Evaluation products** — This product is provided on an "as is" and "with all faults" basis for evaluation purposes only. NXP Semiconductors, its affiliates and their suppliers expressly disclaim all warranties, whether express, implied or statutory, including but not limited to the implied warranties of non-infringement, merchantability and fitness for a particular purpose. The entire risk as to the quality, or arising out of the use or performance, of this product remains with customer.

In no event shall NXP Semiconductors, its affiliates or their suppliers be liable to customer for any special, indirect, consequential, punitive or incidental damages (including without limitation damages for loss of business, business interruption, loss of use, loss of data or information, and the like) arising out of the use of or inability to use the product, whether or not based on tort (including negligence), strict liability, breach of contract, breach of warranty or any other theory, even if advised of the possibility of such damages.

Notwithstanding any damages that customer might incur for any reason whatsoever (including without limitation, all damages referenced above and all direct or general damages), the entire liability of NXP Semiconductors, its affiliates and their suppliers and customer's exclusive remedy for all of the foregoing shall be limited to actual damages incurred by customer based on reasonable reliance up to the greater of the amount actually paid by customer for the product or five dollars (US\$5.00). The foregoing limitations, exclusions and disclaimers shall apply to the maximum extent permitted by applicable law, even if any remedy fails of its essential purpose.

**Translations** — A non-English (translated) version of a document is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

### 8.3 Trademarks

Notice: All referenced brands, product names, service names and trademarks are the property of their respective owners.

**IPC-bus** — logo is a trademark of NXP B.V.

## 9. Contents

---

<b>1</b>	<b>Introduction</b> .....	<b>3</b>
<b>2</b>	<b>Features</b> .....	<b>4</b>
<b>3</b>	<b>Getting started</b> .....	<b>5</b>
3.1	Assumptions .....	5
3.2	Target versions .....	5
3.3	Static handling requirements .....	5
3.4	Ordering .....	5
3.5	Minimum requirements .....	5
3.5.1	Stand-alone demo .....	5
3.5.2	Development .....	5
3.6	Setup .....	6
3.6.1	PCU9669 demo setup .....	6
3.6.1.1	Jumper settings .....	6
3.6.1.2	Connections .....	10
3.6.1.3	Power-on .....	14
<b>4</b>	<b>Troubleshooting</b> .....	<b>16</b>
<b>5</b>	<b>Schematics</b> .....	<b>17</b>
<b>6</b>	<b>Abbreviations</b> .....	<b>17</b>
<b>7</b>	<b>References</b> .....	<b>17</b>
<b>8</b>	<b>Legal information</b> .....	<b>18</b>
8.1	Definitions .....	18
8.2	Disclaimers .....	18
8.3	Trademarks .....	18
<b>9</b>	<b>Contents</b> .....	<b>19</b>

---

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.

---

© NXP B.V. 2012.

All rights reserved.

For more information, please visit: <http://www.nxp.com>

For sales office addresses, please send an email to: [salesaddresses@nxp.com](mailto:salesaddresses@nxp.com)

Date of release: 9 August 2012

Document identifier: UM10563